

USB Cable ×1

(03). Do not attempt repairs on the device yourself.

and any corrosive chemical stuffs.

ventilated or dry place.

is a risk of suffocation in the plastic bag do not

(04). Do not place any foreign object in the dog camera.

(05). Do not use outdoors.for indoor household use only.

(06). Please ensure the dog camera is placed in a safe place where will not fall on people or pets.

(07). Please do not shoot at eyes.

(08). Please keep the dog camera away from fire.water

normal function of grain output.

(10). Do not scratch the camera with sharp objects.

11). We recommend that you place the product in

allow children and pets to touch the plastic bag.

Indicator lights

Food outlet



1.Plug in dog camera.make sure the device is within





until the indicator light turn yellow flashing.



Scan the OR code

Please scan the OR code

sound means scan co successfully.





Device added successfully

Wait for the page to

automatically jump to

the next page.



Click this icon to enter the device

operation interface.

Irregular shape food

Moist food

Full shape

- Food size < 0.2 inch</li>
- Food size > 0.7 inch









c.Operate the app to pop up snacks, repeat

become familiar with the feeder.









20cm between the radiator & your body

Adapter Model: TPA-46050200UU Input: AC 100-240V 50/60Hz 0.3A