

● IMPORTANT SAFETY INSTRUCTIONS



DANGER

To reduce the risk of electric shock:

- DO NOT clean the pet feeder directly with water.
- DO NOT put pet cans, water or any liquid into the pet feeder.
- DO NOT let pets bite the adapter charging cable.
- DO NOT touch or unplug the power adapter with wet hands.
- DO NOT place the pet feeder near fire and high temperature.
- DO NOT place the pet feeder where it could fall or be pulled into the sink.
- After cleaning the food dispenser tray, be sure to dry it before installing.




WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- It is prohibited for non-maintenance personnel to disassemble and repair the pet feeder.
- Please place the pet feeder in a flat and dry place against a wall.
- DO NOT place the pet feeder outdoors for use.
- Use only the dokoo pet feeder's power adapter and USB charging cable.
- Disconnect the power supply before cleaning.
- DO NOT put your hand into or out of food outlet to prevent nip injury.
- DO NOT use pet feeder if the pet feeder structure has been damaged.
- WARNING: Clean the food outlet after every change of food to ensure that the vacuum function operates properly.
- The pet feeder supports dry food only.
- DO NOT place any foreign object in the pet feeder.
- The pet feeder supports a maximum kibble size of 0.9 inch.
- If you have not used this pet feeder in a long time, please clean and wipe the grain in the tank and turn off the power.
- To prevent desiccant from falling into the food tank, please ensure the desiccant packet is intact before use.


Remove the Lid to Release the Vacuum State

It is safe to remove the lid of the pet feeder in any state.

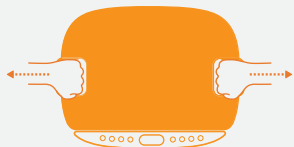


Supports a Maximum Kibble Size of 0.9 Inches


To scale your kibble 1:1 :

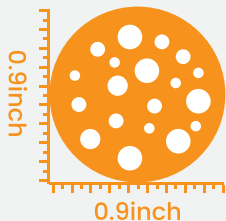

Regularly Clean the Food Outlet

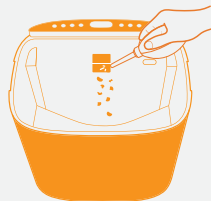

Regularly Replace the Desiccant

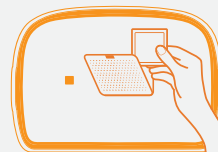

Note:
Avoid children and pets directly contact with the desiccant!

● IN THE BOX

Pet Feeder
x 1



Upper Bowl Holder
x 1



Lower Bowl Holder
x 1



Stainless Steel Food Bowl
x 1



Power Cable
x 1



Power Adapter
x 1



Manual
x 1



Gift Desiccant/Brush/Dust
Blower
x 3



● PRODUCT SUMMARY



Non-washable Components

- 1 Lid
- 3 Food Tank




Washable Components

- 2 Food Dispenser Tray
- 4 Stainless Steel Food Bowl
- 5 Upper Bowl Holder
- 6 Lower Bowl Holder



Product Diagram

- a Desiccant Carrier
- b 2 x Air Intake Vents
- c Inner Food Outlet
- d Air Exhaust Hole
- e Control Panel
- f Microphone
- g Horn
- h Battery Case
- i Power Adapter Port

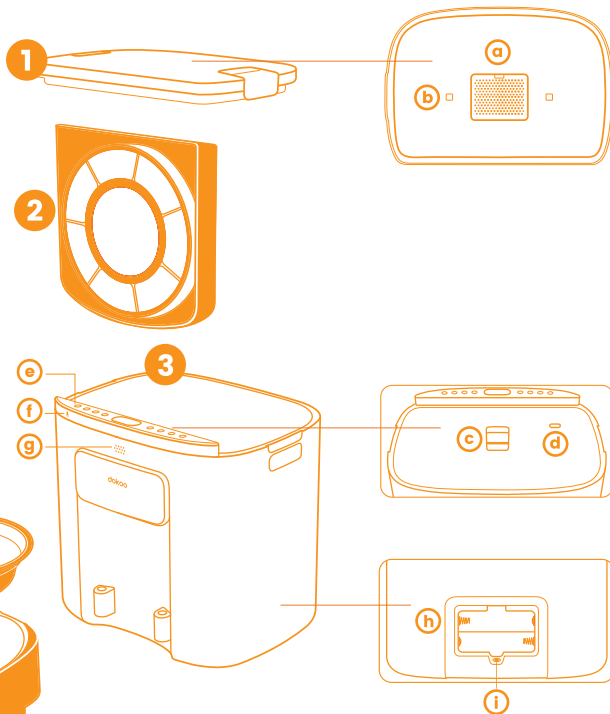



● QUICK START GUIDE

1. Install the Bowl Holders

There are two kinds of adjustable feeder bowl holder, which can be selected according to the height of your pet.

1 Lower Bowl Holder: For Small and Medium Pets


2 Lower Bowl Holder+Upper Bowl Holder: For Medium to Large Pets

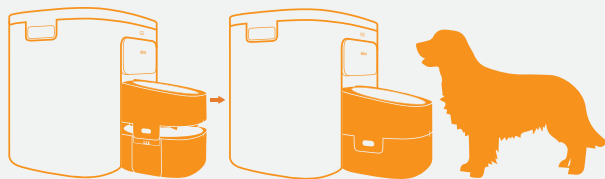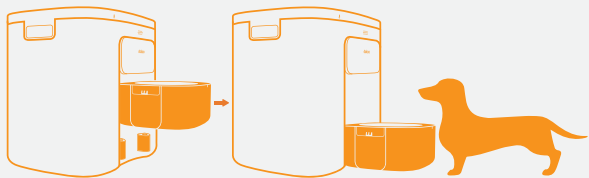

2. Put in Dried Kibble


Kibble Size \leq 0.9inch

Don't exceed the MAX line

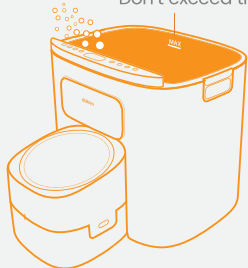


3. Tear Desiccant Film

Remove desiccant, tear film, and return to carrier.

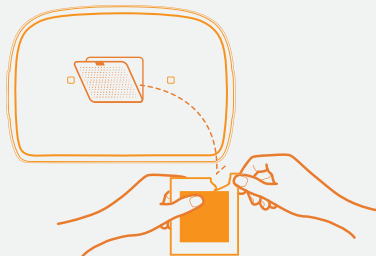

4. Close the lid & Connect Power

Notes: It is only recommended to use the dokoo power adapter and power cable.

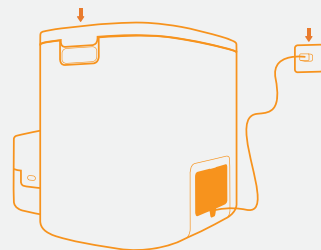

5. Program Setting

Panel Instructions



unlock



feed



pump



voice



reduce



add



set



home

Icons



1 2 3 4 5 6



Locked
/
Unlocked



Recording

Steady on:
recording completed



Time (24H)



Vacuum
Steady on:
feeder in
vacuum state

Blinking:
vacuuming or
releasing air



Battery Level
Steady on:
Device contains
batteries

Blinking:
Low battery



Feed

Blinking:
Insufficient grain

Function Buttons



unlock

Unlocked Button
Long press to unlock
Long press lock screen



feed

Feeding Button
Press to feed



pump

Pumping Button
Press to pump air
press to stop pumping



voice

Recording Button
Long press to start
recording



reduce

Reduce Button
Decrease / Switch



add

Add Button
Increase / Switch



set

Setting Button
Set status
/
Switch to save




home

Home Button
One tap to the home
screen

Long press to put the
feeder into pause mode.

Step 1: Unlock the Pet Feeder

(Make sure the pet feeder is connected to the power supply)

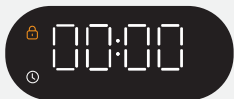

- 1 Long press and hold the "unlock" button to unlock the pet feeder.




- 2 When the lock icon "lock" disappears on the panel, indicating the feeder is unlocked.

Step 2: Set the Current Time

(When using the pet feeder for the first time, set the current time. (For example, the current time is 12:30 a.m.)



- 1 Press the "set" button to set the hour digit which is flashing.

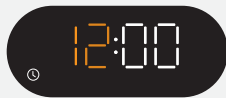


- 2 Press the "add" "reduce" button to set the hour.




- 3 Press the "set" button again, the minute digits will start flashing. Press the "add" "reduce" button to set the minute.

Step 3: Set the First Meal Feeding Time and Portions of Meals (Maximum 6 meals and up to 20 portions for each meal)

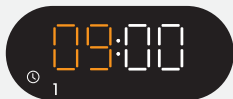


- 1 Press the "set" button, first meal is displayed as "1", and the hour digits will start to flash. Press the "+" "-" button to set the time for the first meal.

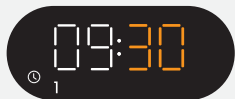

- 2 Press the "set" button again and the minute digits will start to flash. Press the "+" "-" button to set which minute for the first meal.




- 3 Press the "set" button again, the meals icon "🍲" will come up. The meal portion digit will start to flash. Press the "+" "-" button to set how many portions for the first meal.

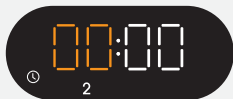

- 4 Continue to press the "set" button and repeat the steps above to set up the rest five meals.

Note: To save the current setting, press the "home" button then exit the setting mode.

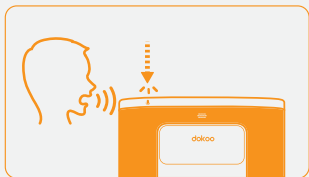

Recording a Meal Call & Playback (10s Maximum)



1 Recording Preparation:

Please speak louder and move closer to the microphone.





- 2 Long press the "" button, and the "" recording icon will come up, starting a 10s recording.




- 3 The recording will automatically be saved and played 10s later. To update the recording, repeat the recording steps above.

How to control the recording time?

Long press the "" button to enter the recording mode and start recording.

Press the "" button again to finish and save the recording.

How to listen to your record?

It will automatically play your record once it is complete. Press the "" button to play your record again.

How to clear the recording?

The record will automatically delete if the recording time is less than "1"s

Manual Feeding



- 1 Press the "🍲" button and the digits "01" will come up on the control panel, the vacuum icon "🍲" will start to flash, indicating that the feeder is releasing the vacuum status.




- 2 When the vacuum icon "🍲" disappears, it means that the vacuum status has been released, and the feeder will start to dispense food.


In vacuum mode, press the feeding button to release the vacuum state before feeding (wait a few seconds).

If the feeder is in a non-vacuum mode, press the feeding button and the feeder will directly feeding without waiting.

Manual Vacuuming (Make Sure the Feeder Lid is Closed)

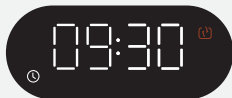

- 1 Press the "🍲" button, the vacuum icon "🍲" will start to flash on the panel, indicating that the pet feeder is vacuuming.

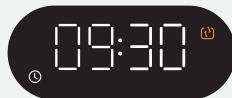

- 2 If the vacuum icon "🍲" is always on, it indicates that the pumping is completed. The pet feeder is now vacuumed.


How to stop pumping while it's pumping? Press the "🍲" button to start pumping, press the "🍲" button again to stop the pumping.

● LEARN MORE



Automatic Lock Screen

If there is no operation on the panel buttons for "2"mins in the unlocked mode, the screen will be automatically locked.



Lock Screen Manually

In the unlocked mode, press and hold the "" button for "3"s to lock the screen.

Quick Access to the Browse Mode (View the Feeding Plan You Set up)

Prerequisite: It only takes effect when the basetime is set. Press the " + " button to quickly enter the browse mode to view the previously set feeding plan.

Reset to Defaults

Press these two " + " button at the same time for "3"s to clear all the set up feeding plans and recordings.

How to Release the Vacuum Mode

Removing the lid of the food tank can relieve the vacuum state.


Turn off Vacuum Function

Press and hold the " +  + " button at the same time for "3"s.



Turn on Vacuum Function

Press and hold the " +  + " button at the same time for "3"s.


How to Exit Settings Mode

Press the "" button to exit the settings mode and return to the home screen.

Food Shortage Alert

When there is a small amount of food left in the tank, the feed icon "" will flash on the panel. After refilling the food, the feed icon "" will disappear.

Low Battery Level

When the battery level is lower than 20%, the battery level icon “

● CLEAN & CARE

In a non-vacuumed and unlocked state, long press the home button “


In a non-vacuumed and unlocked state, long press the home button “

- 1 Remove the lid to release the pressure. In the unlocked state, long press the home button “


Note:

1. The main screen displaying C-01 indicates that the feeder is in pause mode.
2. Make sure food tank is empty before cleaning.

- 2 Use your hand to grip the food dispenser tray assembly and pull it upward to remove the dispenser tray.

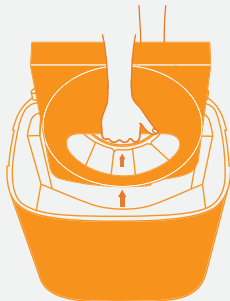


- 3 Hold the dust blower and blow dust to clean out any food residue from the gaps around the food outlet.

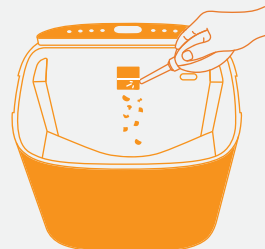


- 4 Clean up all the food residue in the food tank thoroughly.



- 5 Clean the food dispenser tray assembly and be sure to dry the food dispenser tray assembly after cleaning.

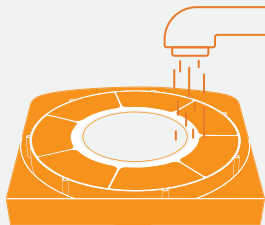

- 6 After installing the food dispenser tray assembly, long press the home button "🏠" again in the unlocked state to end the pause mode and resume normal operation.

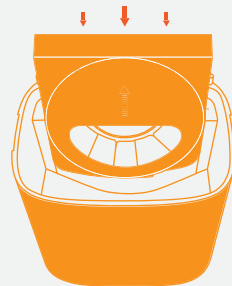

● SPECIFICATIONS

Product Name	Large Pet Feeder	Product Material	ABS
Product Color	White	Rated Input	5V / 2A
Product Dimensions	430*340*410mm	Applicable Environment	Indoor Use Only
Product Weight	9 KG	Applicable Temperature	-10°C to 45°C (14°F to 113°F)
Food Tank Capacity	15 L	Battery	4*1.5V D-cell Batteries
Product Model	FR211		

● FAQ

Problems

Description


Troubleshooting

Food Dispensing Failed

When there is a food jam in the pet feeder the device will beep twice as an alert.

Turn off the power, carefully inspect and clean the food dispenser tray, then restart the pet feeder to resume normal operation.

Pumping Failed

If you manually press the pump button ", the pump icon will flash on the panel. After 30 seconds the pump icon disappears instead of remaining on the panel, indicating that the pumping has failed.

- A. Check that the lid is tightly closed.
- B. Check for food residue in the food outlet which prevents the door from closing tightly and leaks air, resulting in pump failure.

Home Screen Flickering

The home screen of the pet feeder panel is flashing.

- A. If the pet feeder is powered by a power adapter: please check if the power adapter is dokoo's standard power adapter (5V2A).
- B. If the pet feeder is powered by a backup battery: please replace the battery in time.

Inaccurate Feeding Time

If the feeding time is not accurate.

Please recalibrate the system time.

● CERTIFICATION

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Manufacturer:

Shenzhen Zhimu Technology Co., Ltd, hereby declares that this Pet Feeder-F2 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Environmental Conditions:

Use the Pet Feeder-F2 in the environment with the temperature between -10°C to 45°C (14°F to 113°F).

Devices with Headphones or Earpieces:

Be careful when using earphones, as excessive sound pressure from earphones and headphones can potentially lead to hearing loss.

Device with Adapter:

The plug is considered as a disconnecting device for the adapter.

Adapter Model: TPA-46050200UU


Input: AC 100-240V 50/60Hz 0.3A

Output: DC 5.0V, 2.0A

Contact Us:

Web: www.dokoo.net

Email: support@dokoo.net

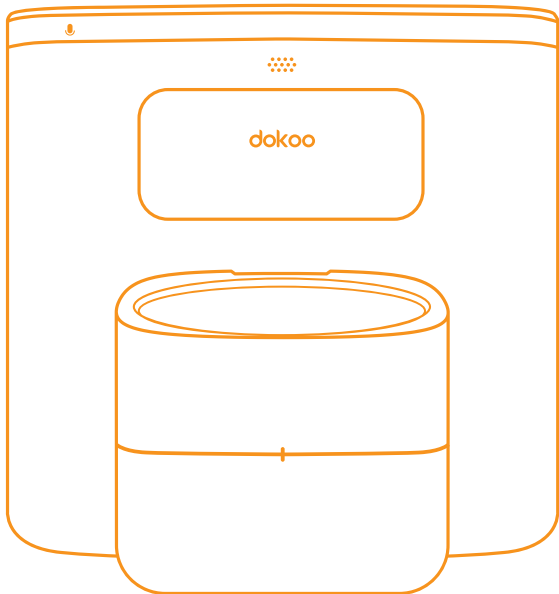

User Manual

Smart Pet Feeder Designed for Large Pet

please read this manual carefully before using

